
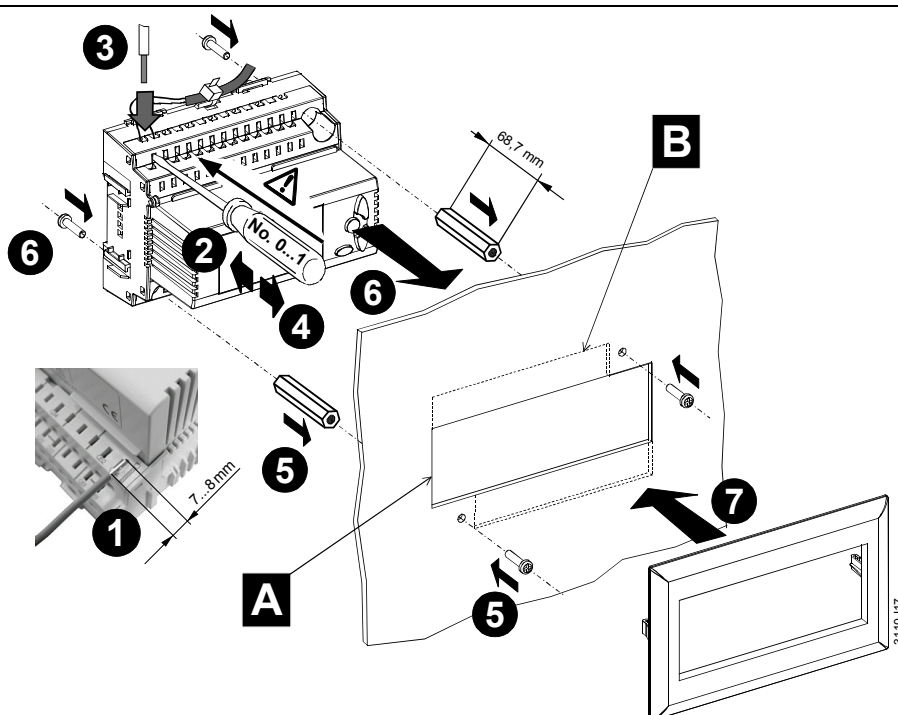


hr	Uputstva za montažu
sl	Navodila za montažo
ro	Instrucțiuni de montare
ru	Инструкция по установке
bg	Инструкция за монтаж
tr	Montaj talimatları


RLU2...

for RLU232, RLU236


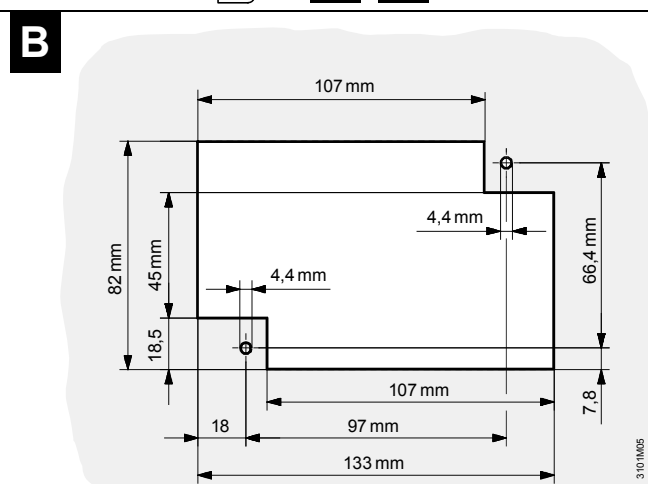


Yayı sadece mekanik sınır hissedilene kadar itin.

C

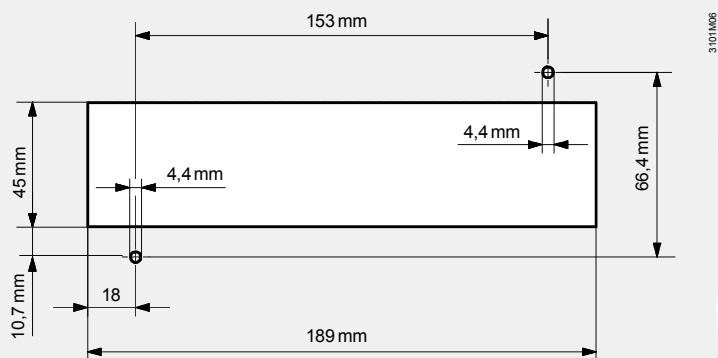

D

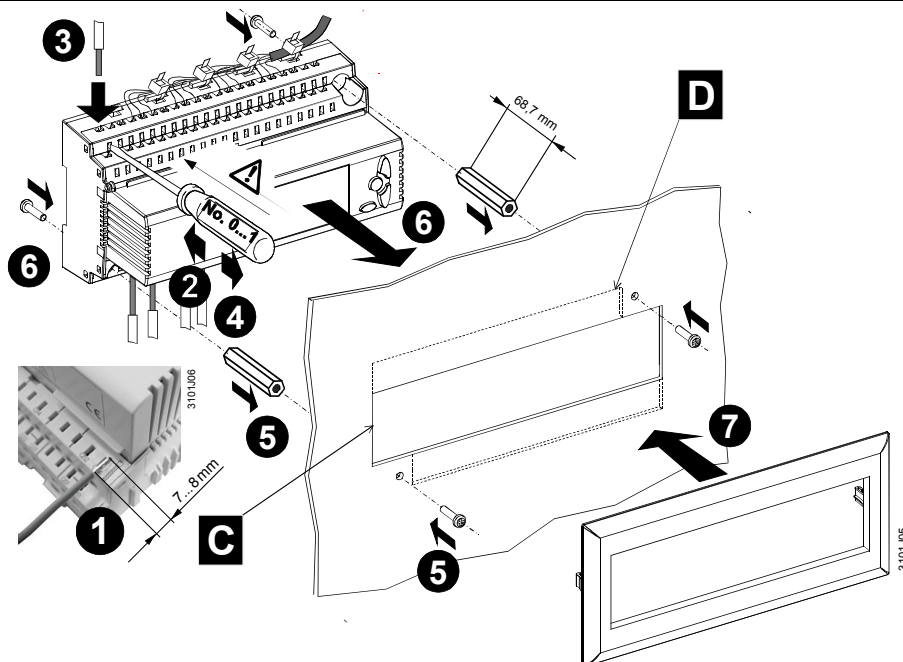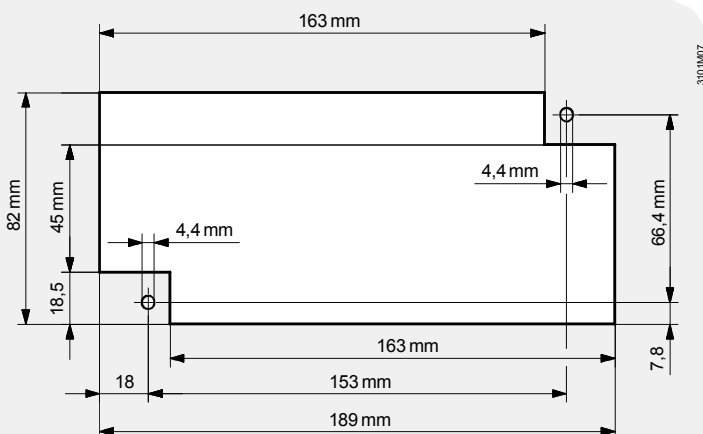

Feder nur bis zum spürbaren Anschlag betätigen
Push spring only until mechanical stop is felt.
Ne plus comprimer le ressort lorsque la butée est perceptible

Tryck ner fjädern tills det tar stopp (bottenläge)
Veer tot voelbare aanslag indrukken
Comprimere la molla sola fino alla percezione del fermo

Paina jouta vain mekaaniseen rajoittimeen asti.
Pulsar el resorte hasta que se sienta el tope mecánico

Tryk kun på fjeder til mærkbart anslag.
Ucisnąć sprężynę tylko do wyczuwalnego oporu.
Tlačte na pružinu pouze dokud nenarazí na mechanický doraz

Pružina sa musí zatlačiť až po citeľný doraz.
Csavarhúzóval csak addig nyomja a szorítóbilincset, amíg az a véghelyzetet eléri.
Πιέστε το ελατήριο έως το μηχανικό τερματισμό

Prima a mola do borne sem forçar.
Potiskujte oprugu samo dok ne oseti-te mehaničku prepreku.

Zatezati oprugu samo do pojave mehaničkog otpora

Vzmet potisnite le do mehanskega omejitnika.
Apasati arcul numai pana cand simtiti o limitare mecanica.

Нажимайте на пружину только до ощущения механической остановки.

Натисни пружината само до фабричния ограничител.

Yayı sadece mekanik sınır hissedilene kadar itin.